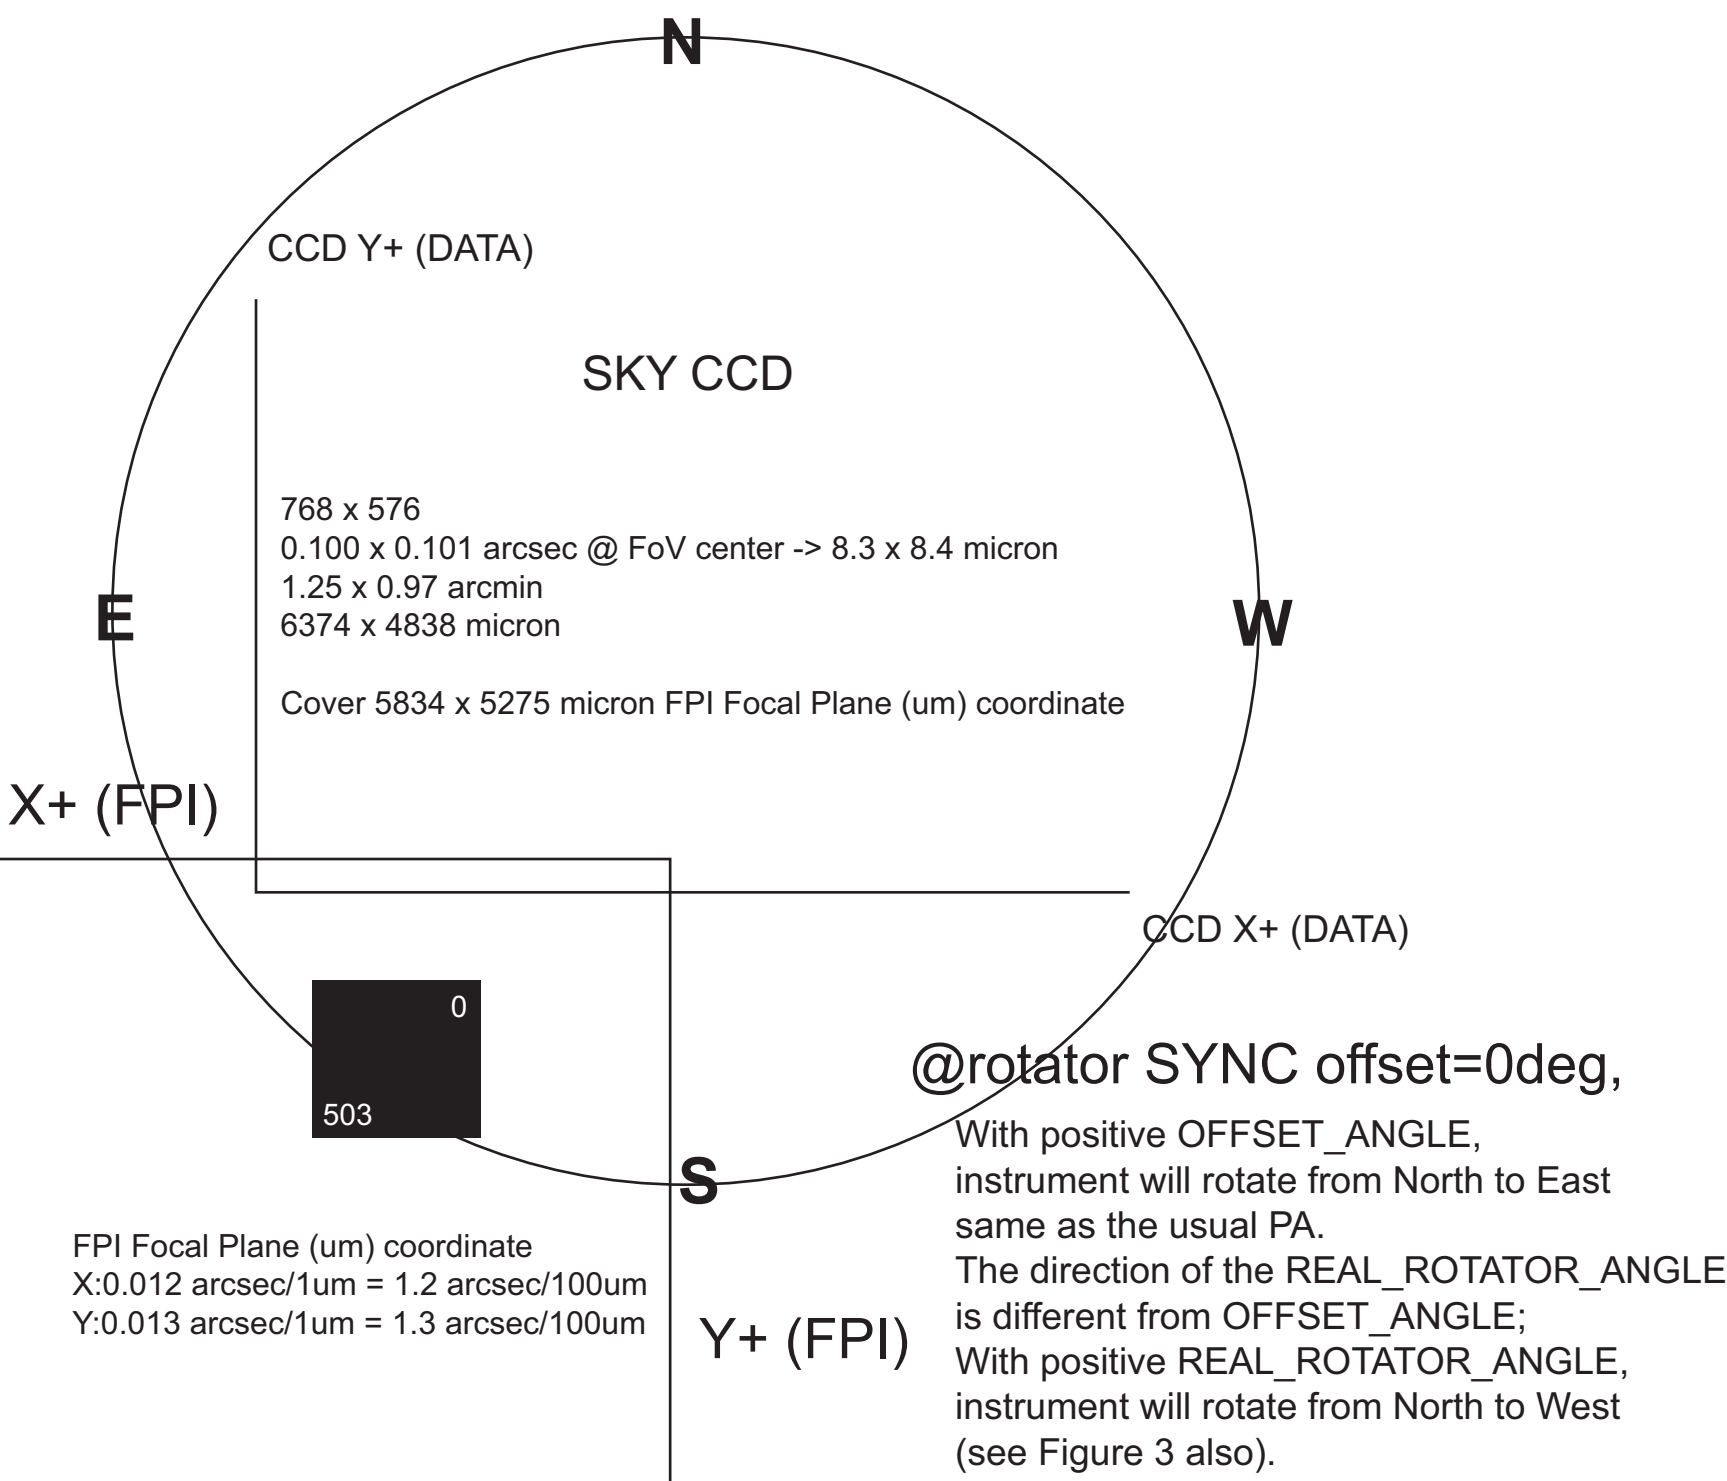

@rotator SYNC offset=0deg,

With positive OFFSET_ANGLE,
instrument will rotate from North to East
same as the usual PA.
The direction of the REAL_ROTATOR_ANGLE
is different from OFFSET_ANGLE;
With positive REAL_ROTATOR_ANGLE,
instrument will rotate from North to West
(see Figure 3 also).